


# Wiring Diagram VW Transporter (from August 1965, Chassis No. 211 000 001)

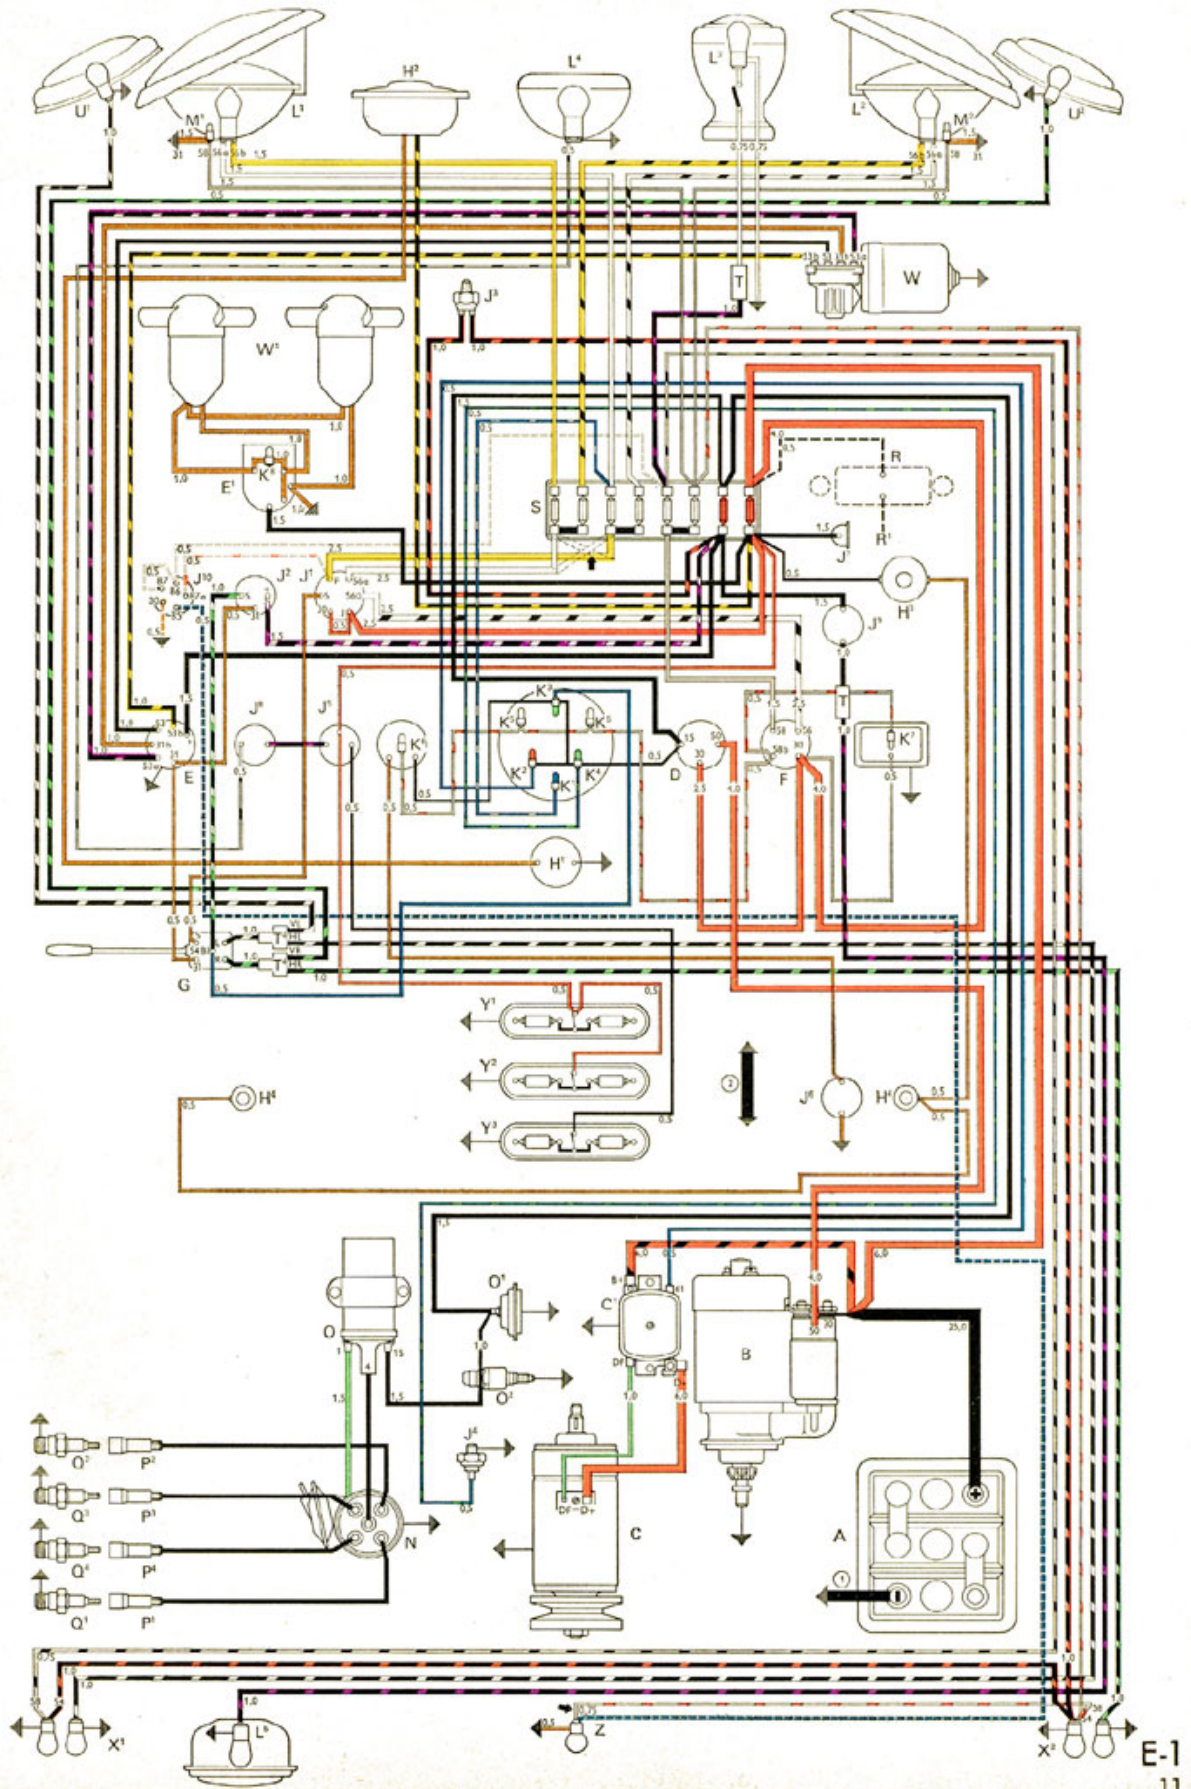

(from August 1965, Chassis No. 211 000 001)

- A - Battery
- B - Starter
- C - Generator
- C<sup>1</sup> - Regulator
- D - Ignition/starter switch
- E - Windshield wiper switch
- E<sup>1</sup> - *Ventilator fan motor switch*
- F - Lighting switch
- G - Turn signal switch
- H<sup>1</sup> - Horn button
- H<sup>2</sup> - Horn
- H<sup>3</sup> - *Buzzer*
- H<sup>4</sup> - *Buzzer button*
- J<sup>1</sup> - Headlamp flasher and dimmer relay  
(for Austria only)
- J<sup>2</sup> - Flasher unit
- J<sup>3</sup> - Brake light switch
- J<sup>4</sup> - Oil pressure switch
- J<sup>5</sup> - Interior light switch
- J<sup>6</sup> - Fuel gauge sender unit
- J<sup>7</sup> - *Socket*
- J<sup>8</sup> - *Red Cross light switch*
- J<sup>9</sup> - *Speedometer cable switch*
- J<sup>10</sup> - License plate light relay (for Austria only)
- K<sup>1</sup> - High beam warning light
- K<sup>2</sup> - Generator and cooling fan warning light
- K<sup>3</sup> - Turn signal warning light
- K<sup>4</sup> - Oil pressure warning light
- K<sup>5</sup> - Speedometer light bulb
- K<sup>6</sup> - Fuel gauge light bulb
- K<sup>7</sup> - Clock light bulb
- K<sup>8</sup> - *Ventilator fan motor warning light*
- L<sup>1</sup> - Twin filament bulb, left
- L<sup>2</sup> - Twin filament bulb, right
- L<sup>3</sup> - *Spot light bulb*
- L<sup>4</sup> - *Red Cross light bulb*
- L<sup>5</sup> - *Back-up light bulb*
- M<sup>1</sup> - Parking light, left
- M<sup>2</sup> - Parking light, right
- N - Distributor
- O - Ignition coil
- O<sup>1</sup> - Automatic choke
- O<sup>2</sup> - Electro-magnetic pilot jet
- P<sup>1</sup> - Spark plug connector, No. 1 cylinder
- P<sup>2</sup> - Spark plug connector, No. 2 cylinder
- P<sup>3</sup> - Spark plug connector, No. 3 cylinder
- P<sup>4</sup> - Spark plug connector, No. 4 cylinder
- Q<sup>1</sup> - Spark plug, No. 1 cylinder
- Q<sup>2</sup> - Spark plug, No. 2 cylinder
- Q<sup>3</sup> - Spark plug, No. 3 cylinder
- Q<sup>4</sup> - Spark plug, No. 4 cylinder
- R - Radio
- R<sup>1</sup> - Aerial
- S - Fuse box
- S<sup>1</sup> - *Connector and fuse*
- T - Cable connector
- T<sup>4</sup> - Cable adapter
- U<sup>1</sup> - Turn signal, front left
- U<sup>2</sup> - Turn signal, front right
- W - Windshield wiper motor
- W<sup>1</sup> - *Ventilator fan motors*
- X<sup>1</sup> - Brake, turn signal and tail light, rear left
- X<sup>2</sup> - Brake, turn signal and tail light, rear right
- Y<sup>1</sup> - Interior light, front
- Y<sup>2</sup> - *Ambulance compartment light*
- Y<sup>3</sup> - Interior light, rear
- Z - License plate light

- ① - Battery to body ground strap
- ② - Transmission to body ground strap

*Italics: Only for ambulance*

Dotted lines: Only for Austrian vehicles

► - Interchanged or not installed on Austrian vehicles